




SeceuroGlide Compact Garage Door Fitting Instructions

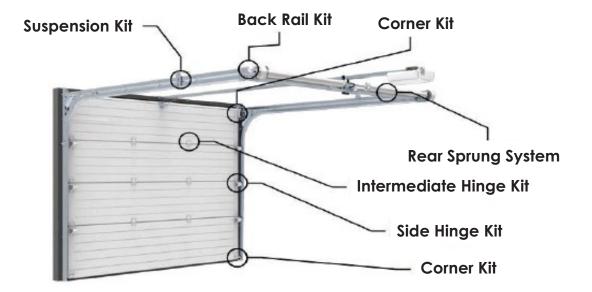


Fitter's Information Pack - SeceuroGlide Sectional Compact

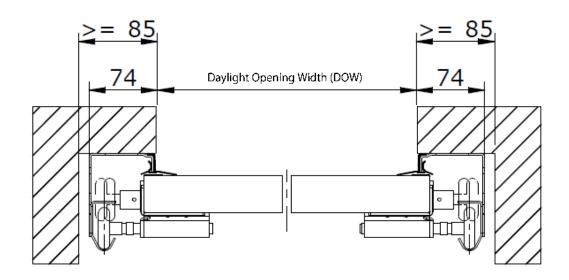





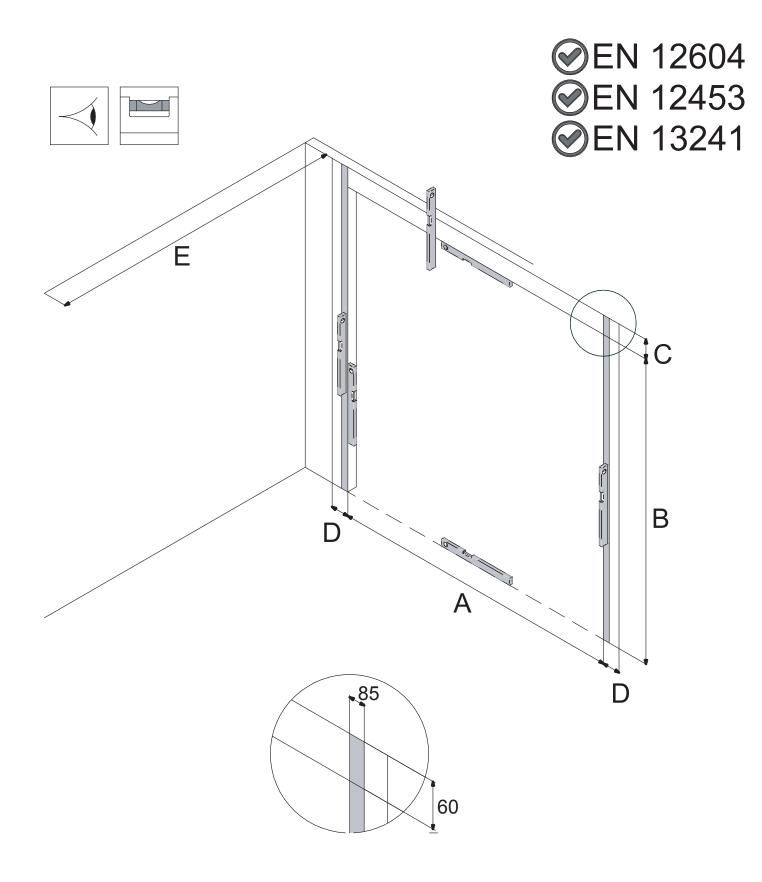



Α	В	С	D	E
DLW	DLH	FHR	FSR	FMD
Daylight Width	Daylight Height	Free Head Room	Free Side Room	Free Mounting Dept

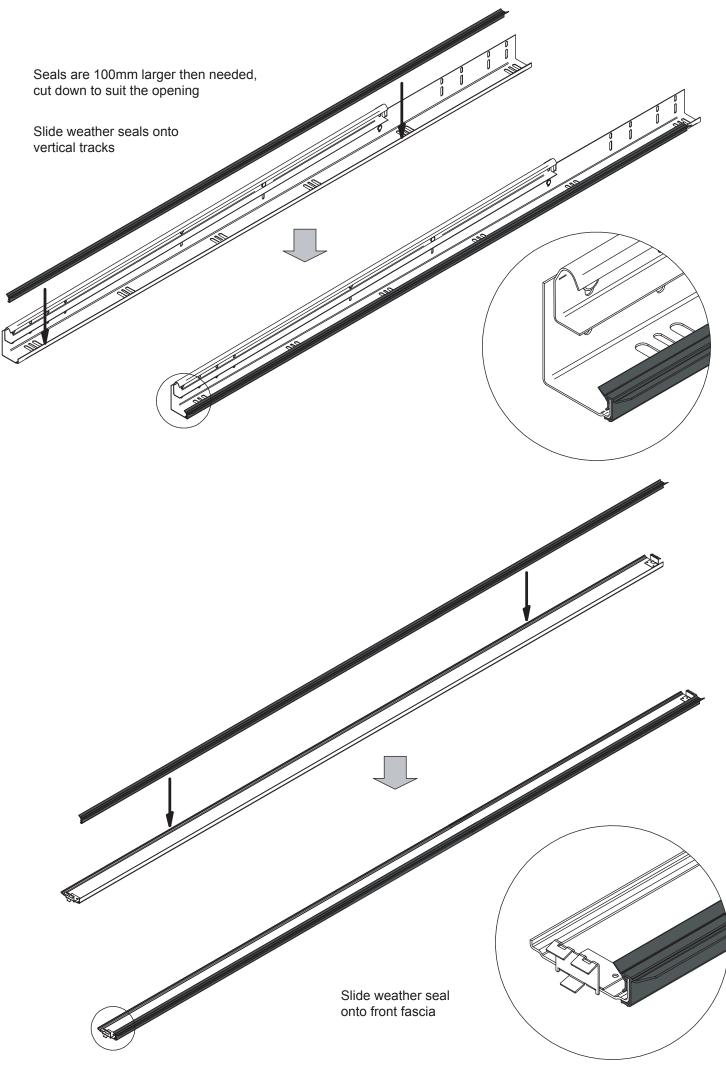

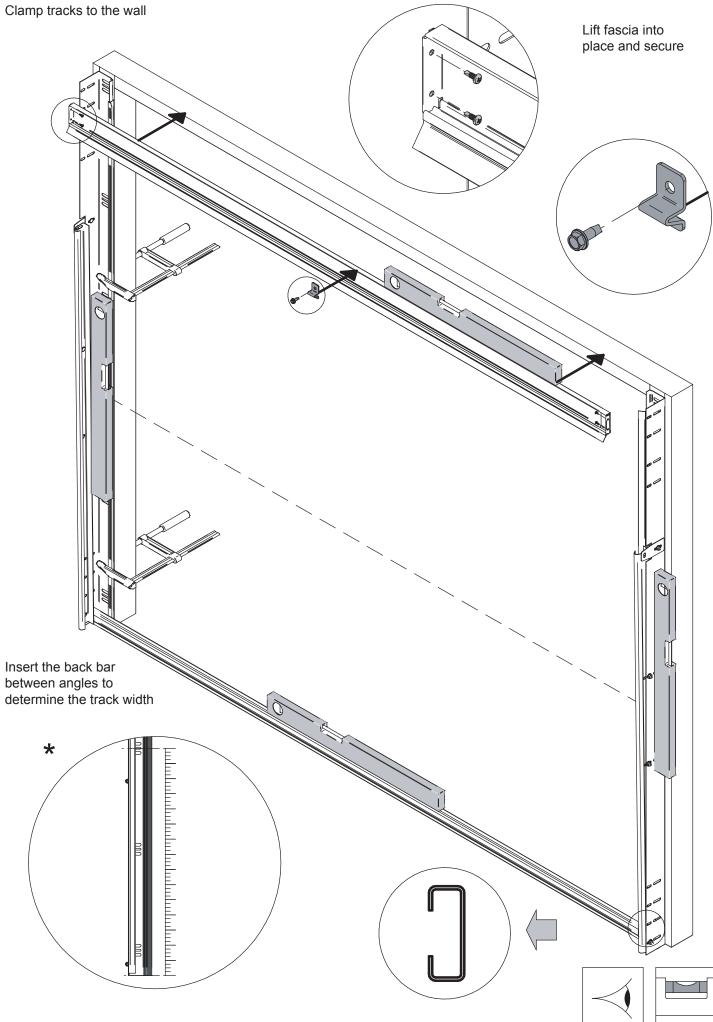


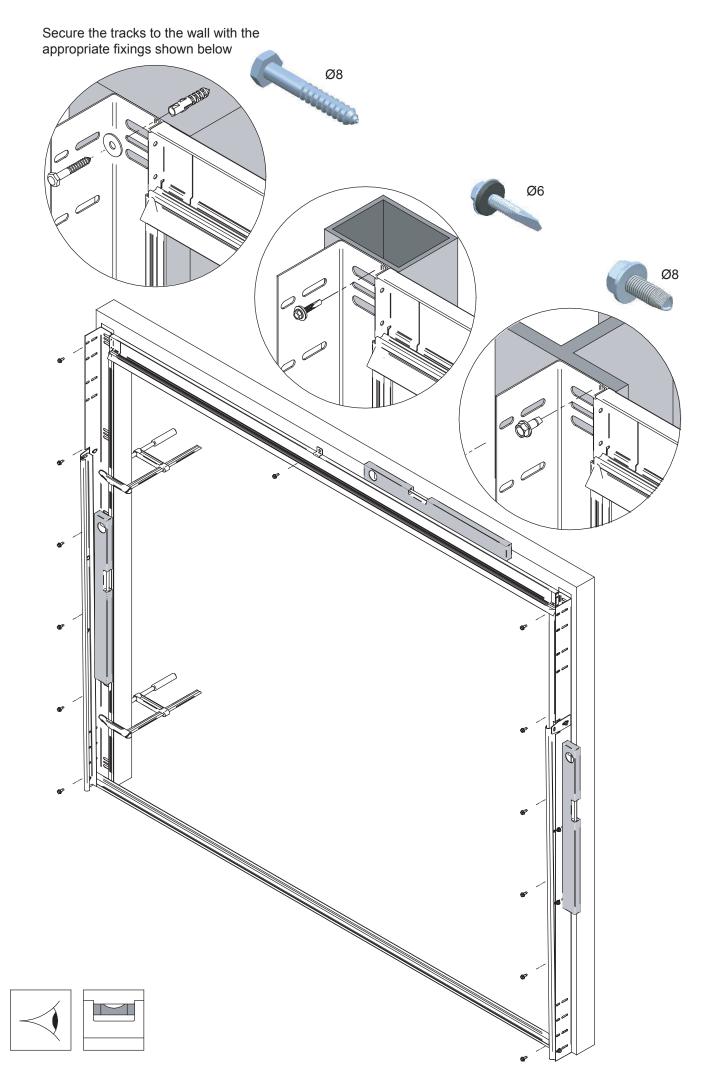


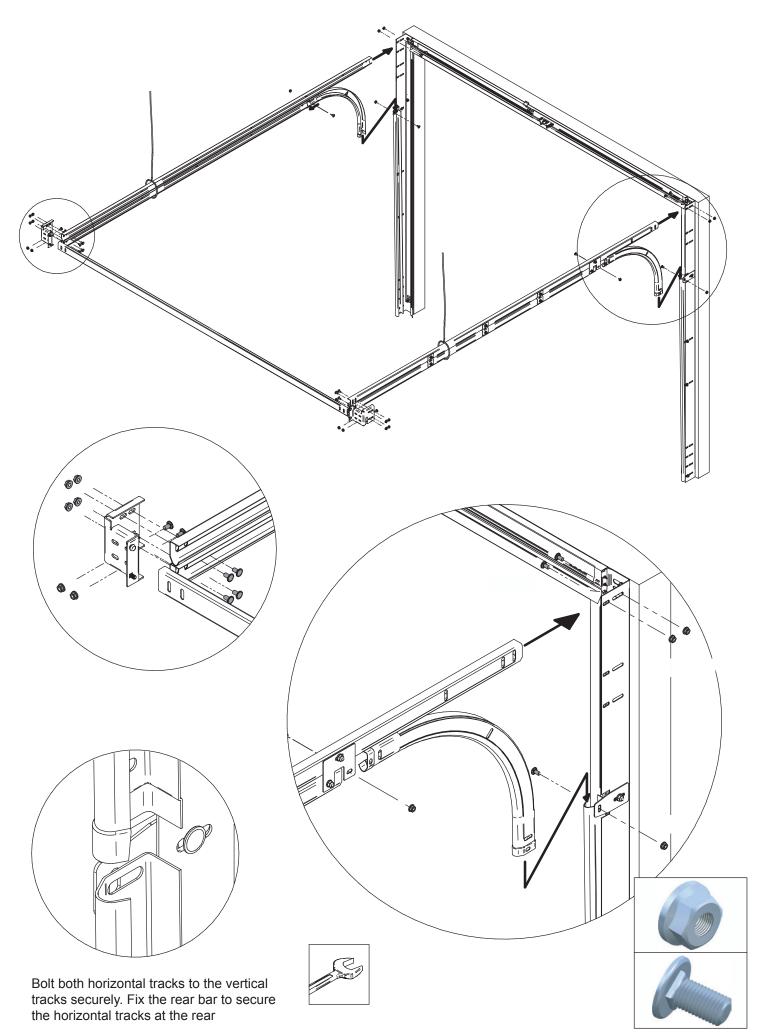


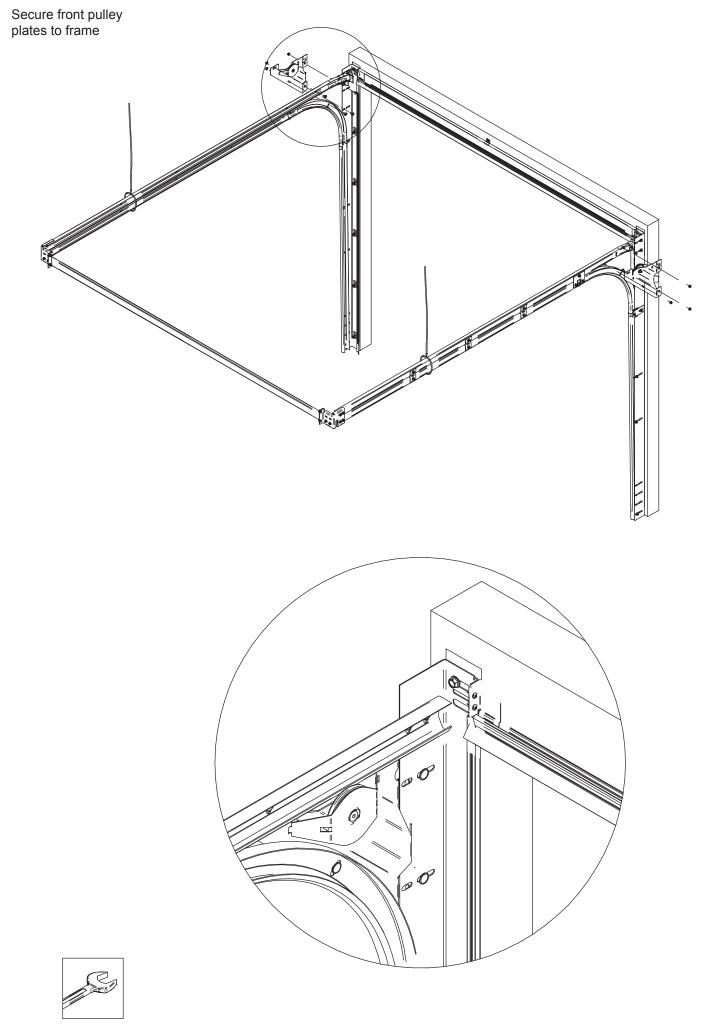


 Measure from corner to corner to determine if the horizontal track area is square, adjust accordingly. Before securing the L shape hangers, ensure the horizontal tracks are level

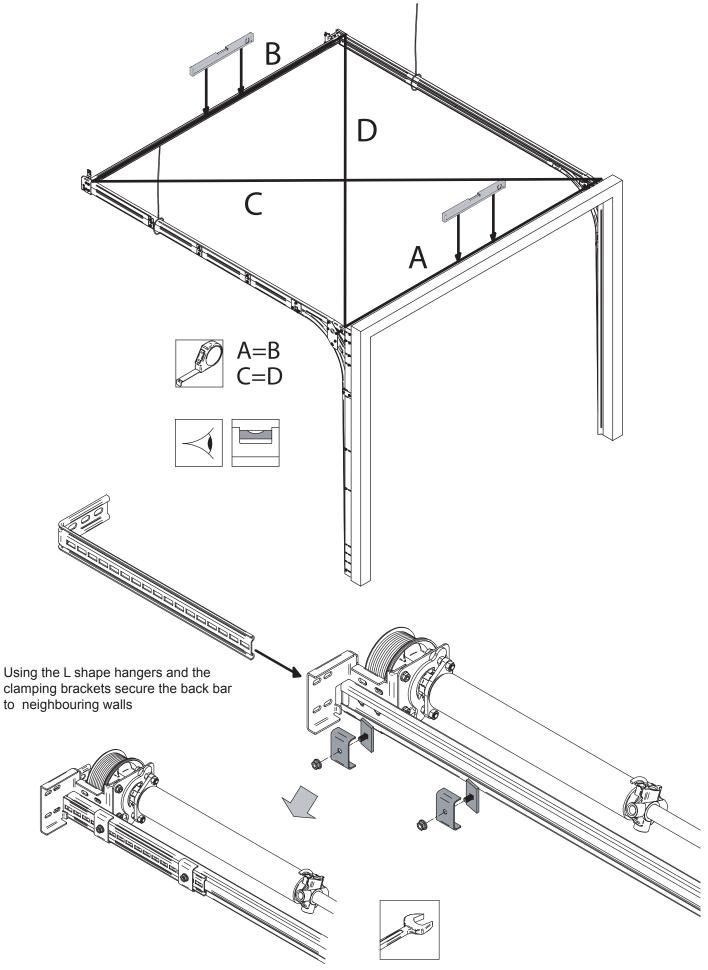

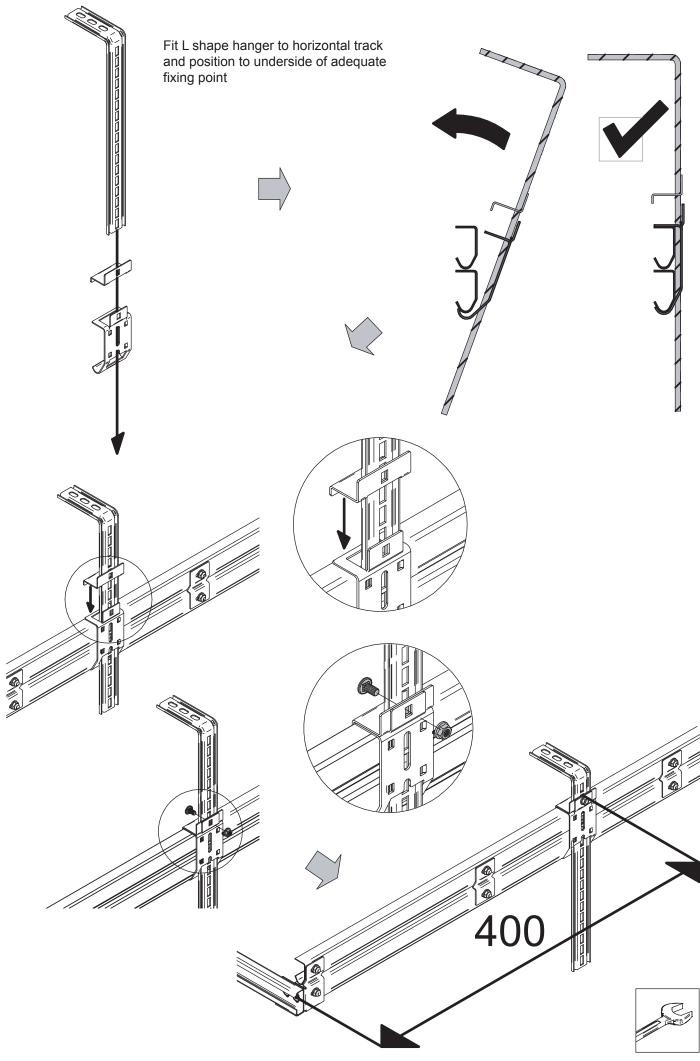


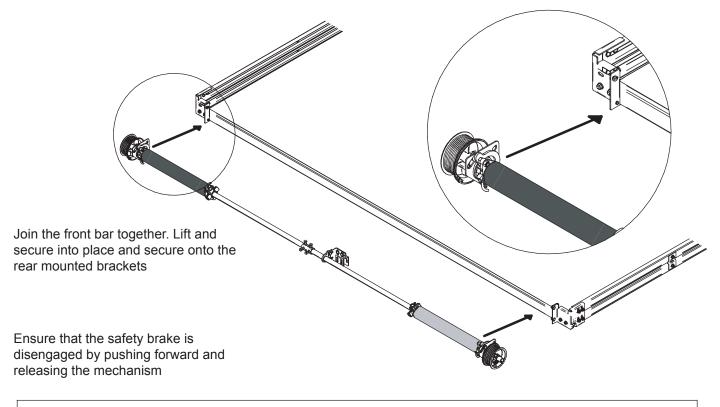






Secure spring assembly to back section using mounting parts shown




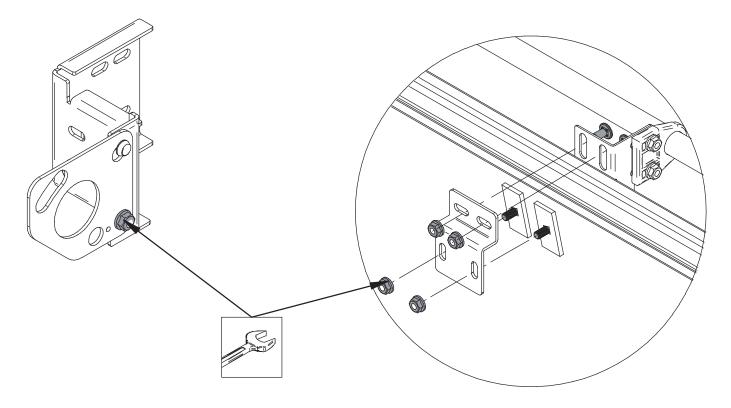

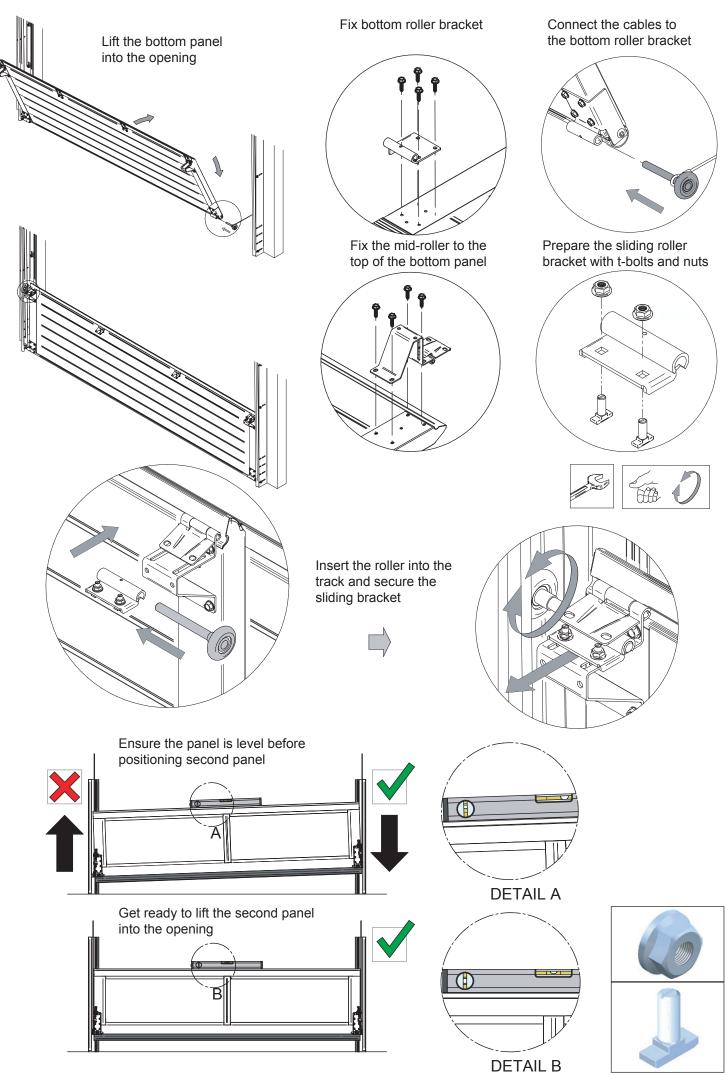


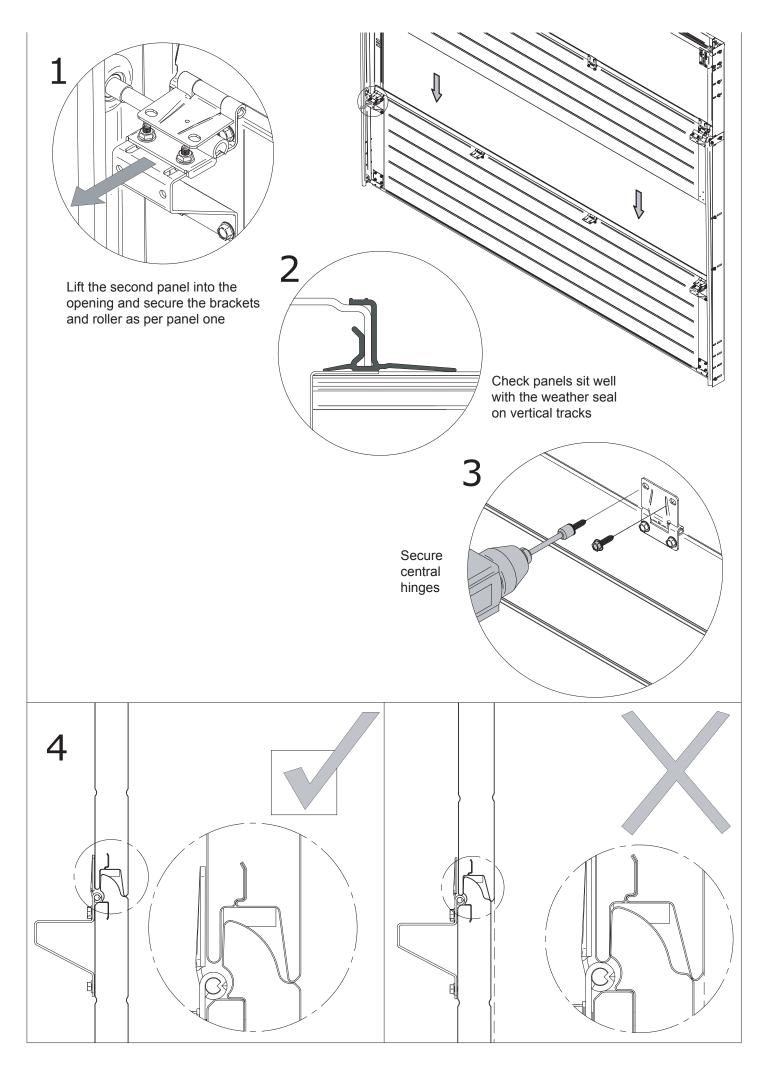


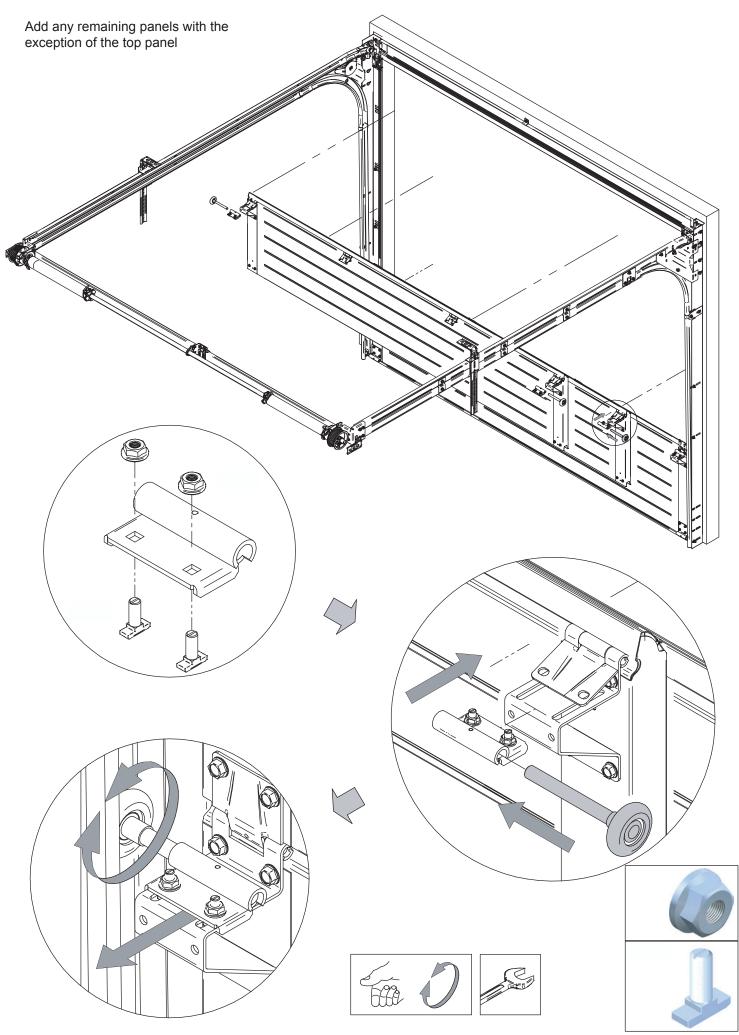


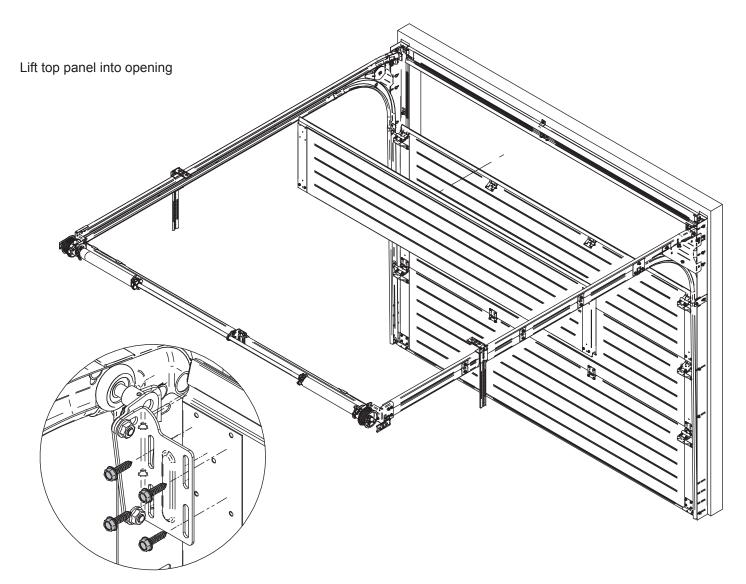


Secure the top roller brackets to the top panel

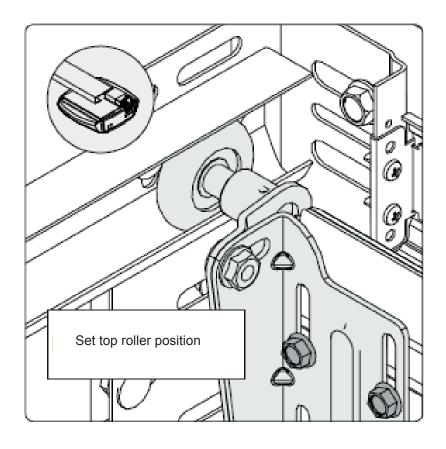

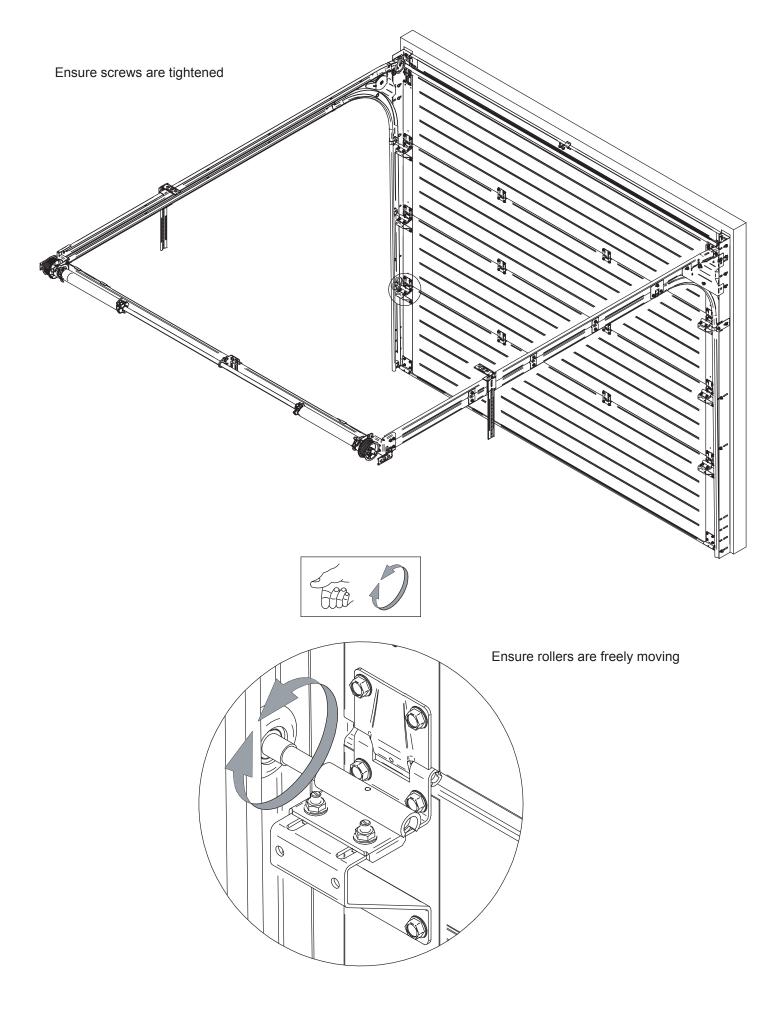

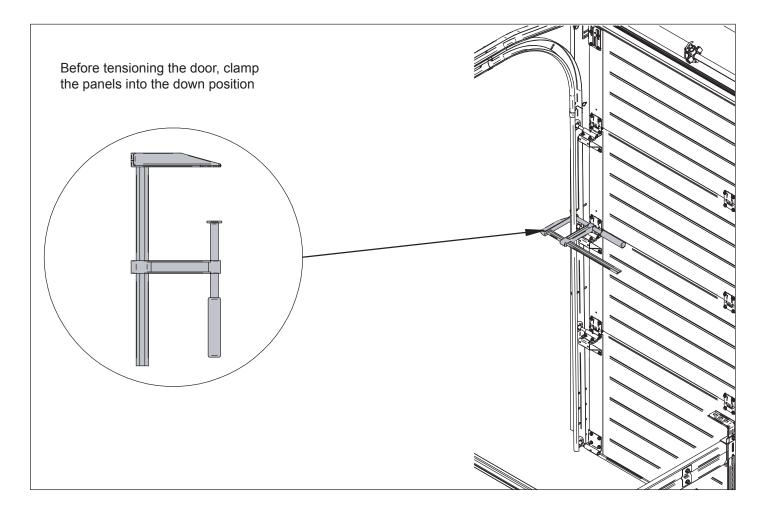


Ensure the cables are equally coiled around the drum

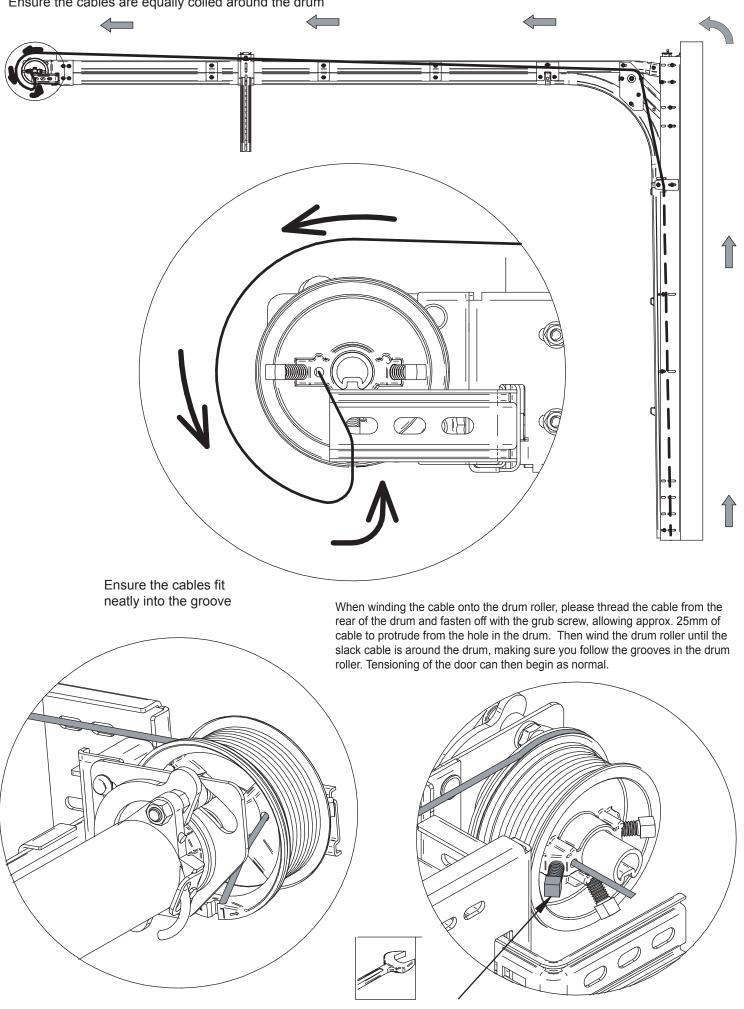


When tensioning the springs take great care, improper tensioning could lead to the tensioning bars striking your body.

Check paperwork or spring tension label found on the spring for number of turns.



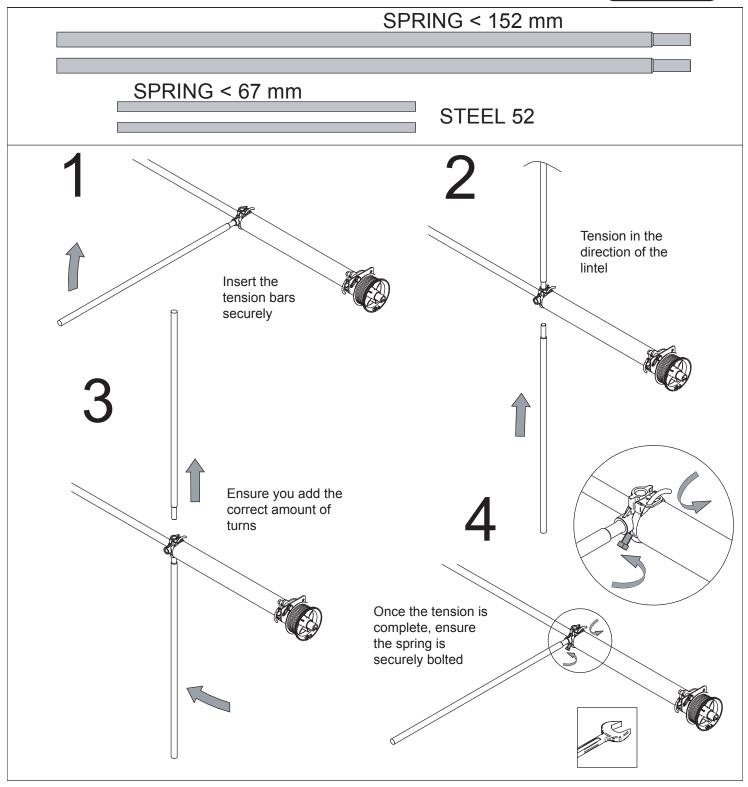


Correct fastening of winding plug

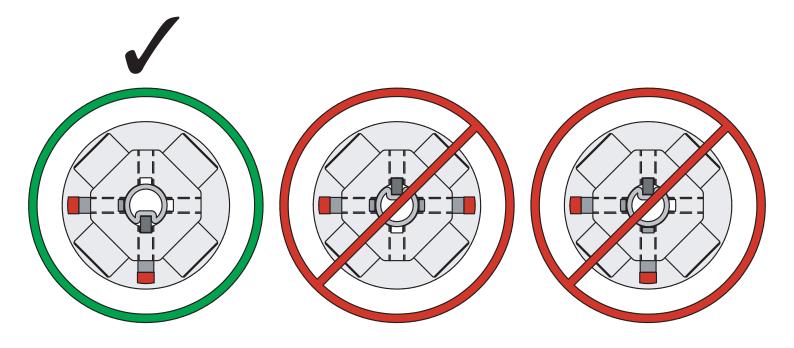

Ensure the locking bolts are pressing down on the key way

 Once the tension is in place, check that the door is level. Check the balance and adjust if necessary



Reveal Options

Executive Framing Kit

